



Fasten Every Rib And Valley At Ridge Or Peak And Eave

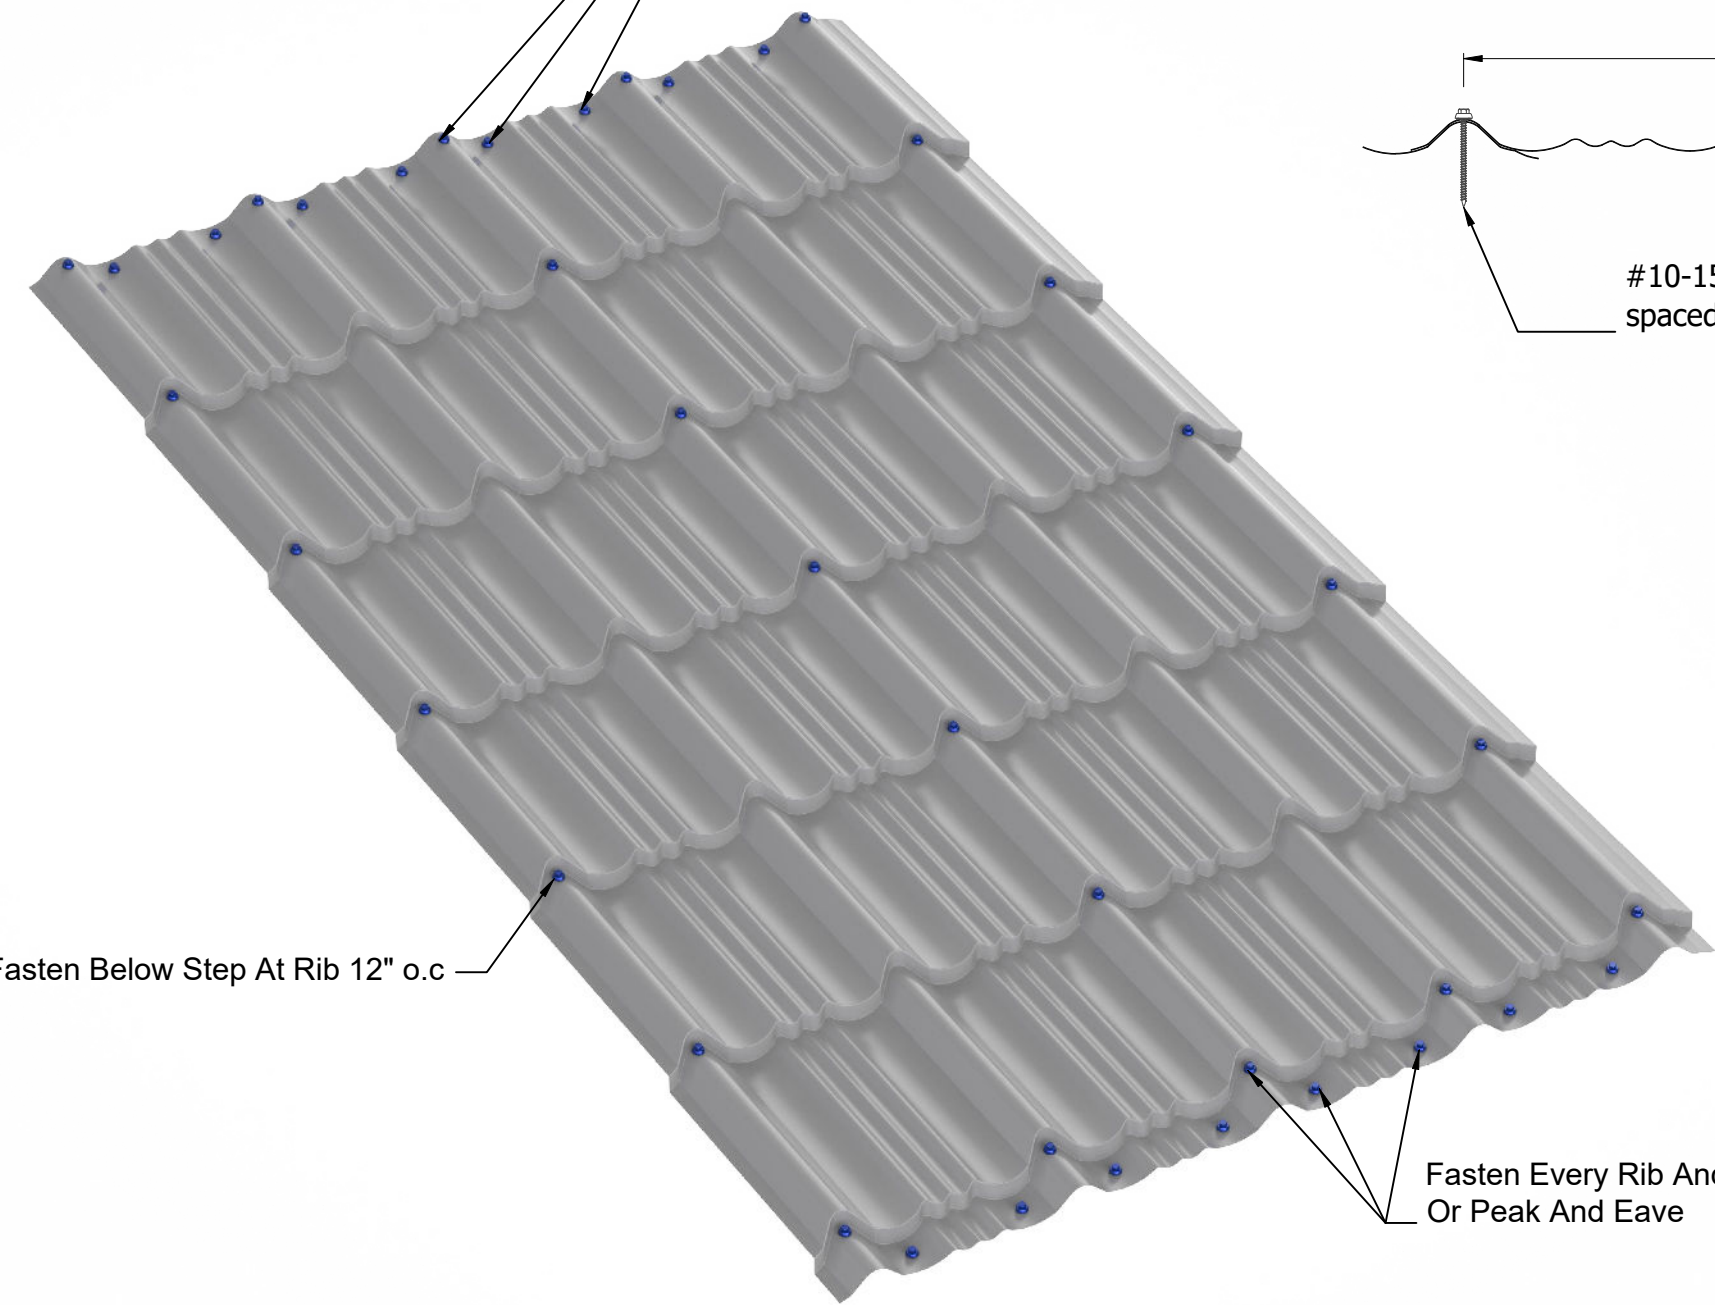

Fasten Below Step At Rib 12" o.c

Fasten Every Rib And Valley At Ridge Or Peak And Eave

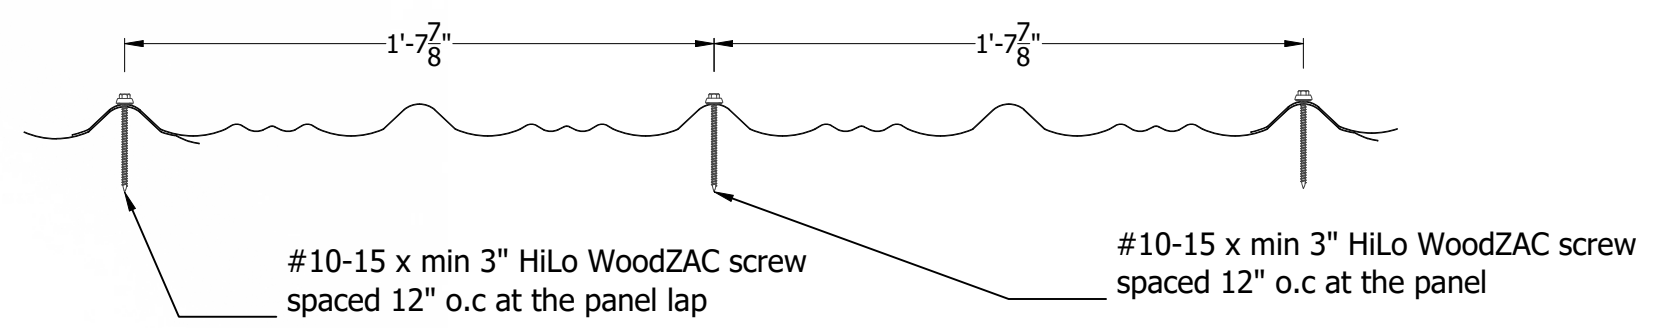

#10-15 x min 3" HiLo WoodZAC screw spaced 12" o.c at the panel lap

#10-15 x min 3" HiLo WoodZAC screw spaced 12" o.c at the panel

Fastening Pattern For Non-HVHZ Construction



942 Blanche Street  
Jacksonville, FL 32204  
(904)799-6499

This Page contains general application details.  
Actual Installation may require additional items  
based on good roofing practices

Description: Prima Tile  
Panel Screw Information  
(Non-HVHZ construction)