



Fasten Every Rib And Valley At Ridge Or Peak And Eave

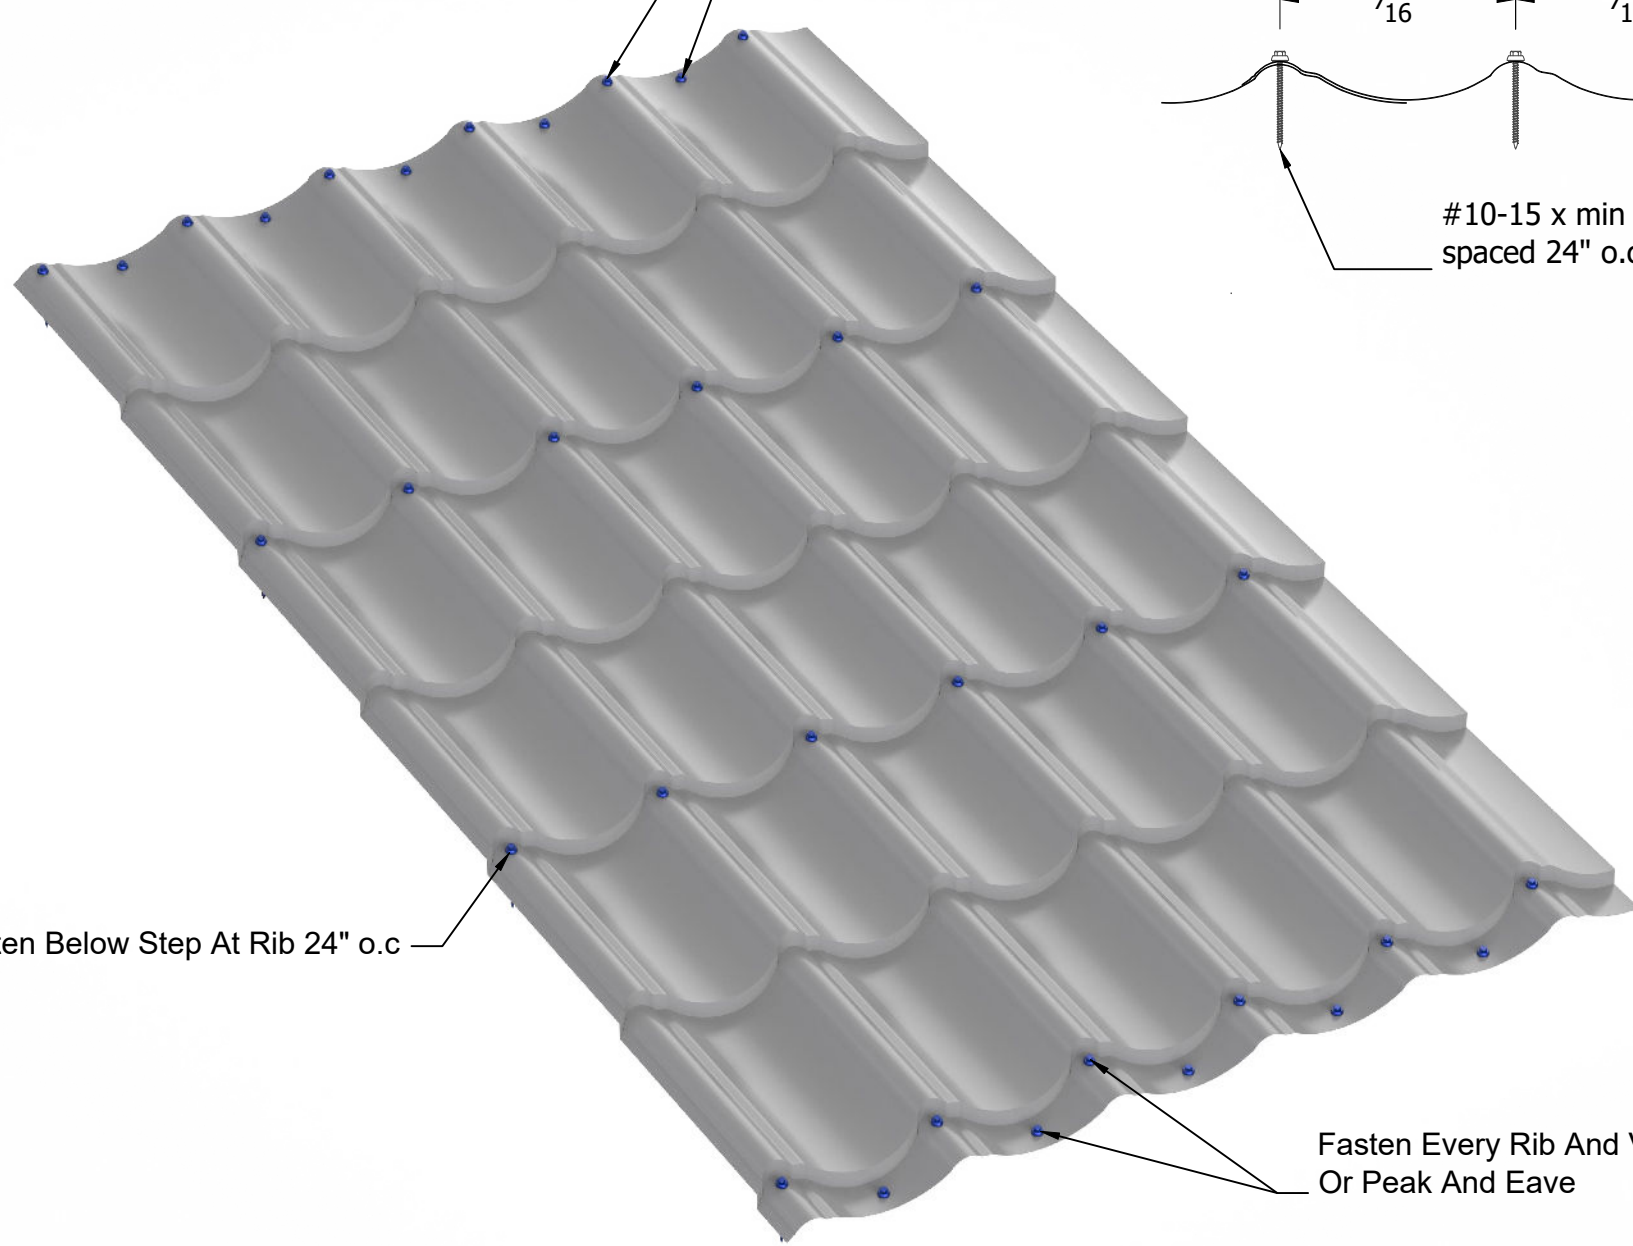

Fasten Below Step At Rib 24" o.c

Fasten Every Rib And Valley At Ridge Or Peak And Eave

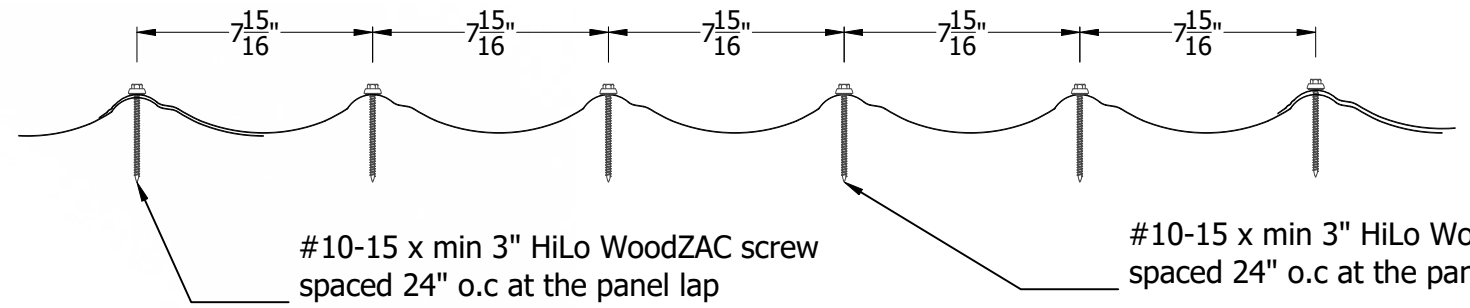

#10-15 x min 3" HiLo WoodZAC screw spaced 24" o.c at the panel lap

#10-15 x min 3" HiLo WoodZAC screw spaced 24" o.c at the panel

Fastening Pattern For Non-HVHZ Construction



942 Blanche Street
Jacksonville, FL 32204
(904)799-6499

This Page contains general application details.
Actual Installation may require additional items
based on good roofing practices

Description: Wave Tile
Panel Screw Information
(Non-HVHZ construction)